



Before You Begin: Download and extract the AmTab Material Library support files to a permanent location on your computer or network. Do not move or rename these files after completing the setup.

STEP 1: LINK A RENDER APPEARANCE PATH

- A Render Appearance Path links Revit to the JPEG images used in the custom material libraries.
 1. From the **File** tab, select **Options**, then select **Rendering** from the left menu. Under **Additional Render Appearance Paths**, click the green plus sign. Select the three dots to browse for the downloaded JPEG support files.

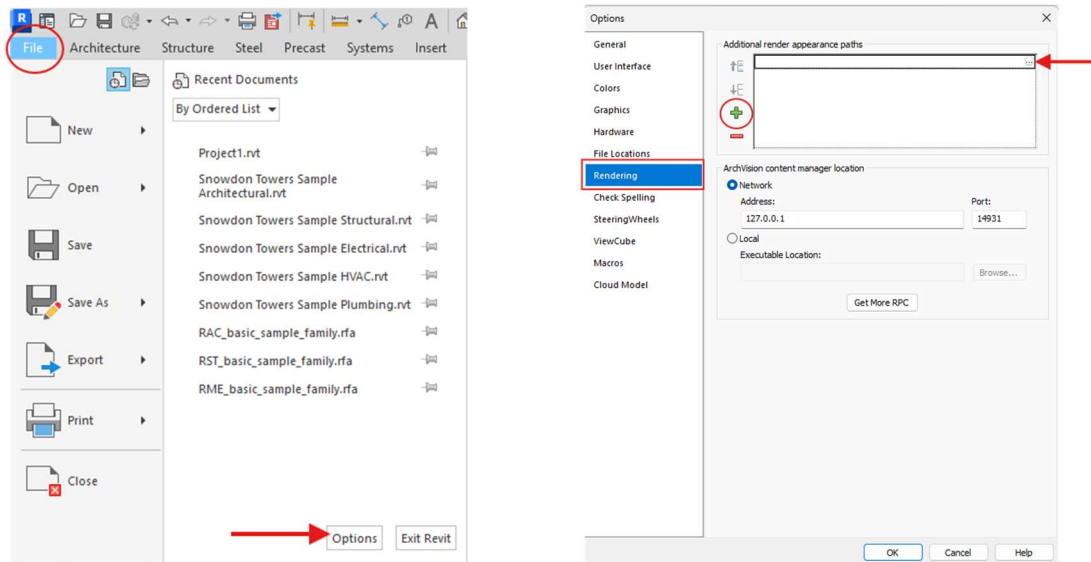

2. Select one of the 14 AmTab material image folders, then click **Open**. Repeat this process until all 14 folders are listed under Additional Render Appearance Paths.

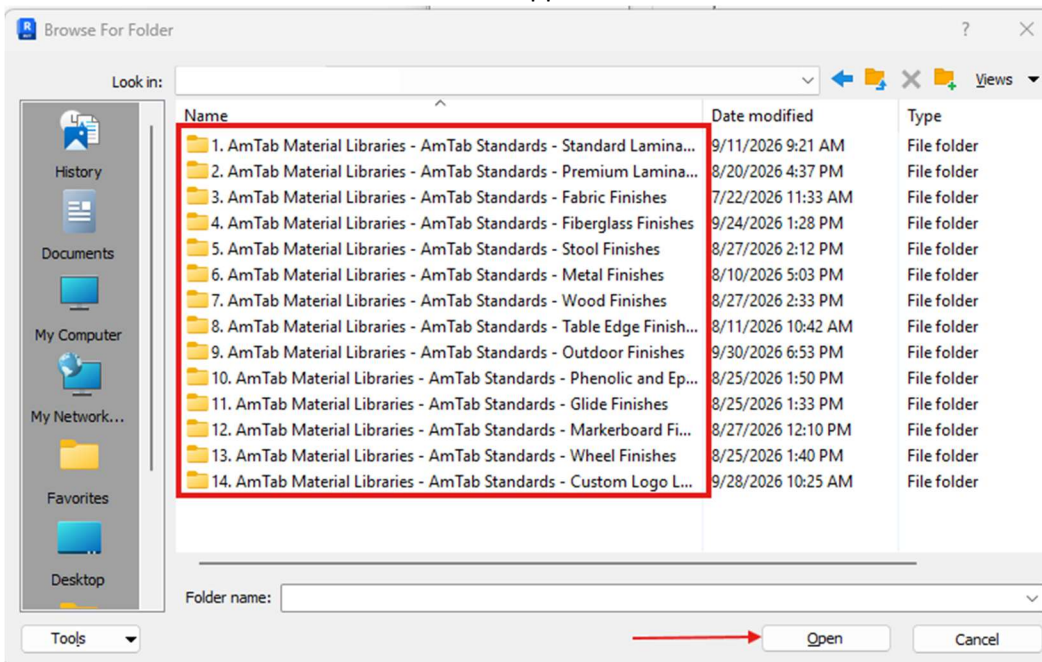


3. Click **OK**, close Revit, and reopen the program before continuing to Step 2.


STEP 2: IMPORT MATERIAL LIBRARIES

- Import the AmTab Material Libraries for use with AmTab Revit families.

1. Open the **Material Browser**. Select the yellow folder icon in the lower-left corner, then choose **Open Existing Library**.

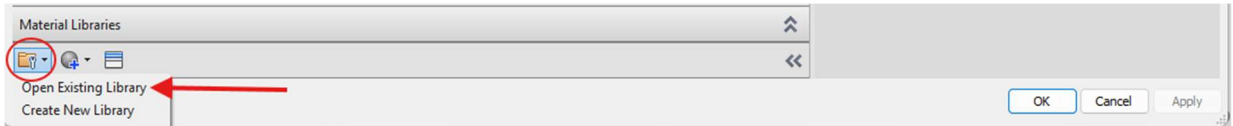

2. Navigate to the downloaded support files and select the desired **ADSKLIB** file. Only one material library can be opened at a time. Repeat this step to open additional libraries.

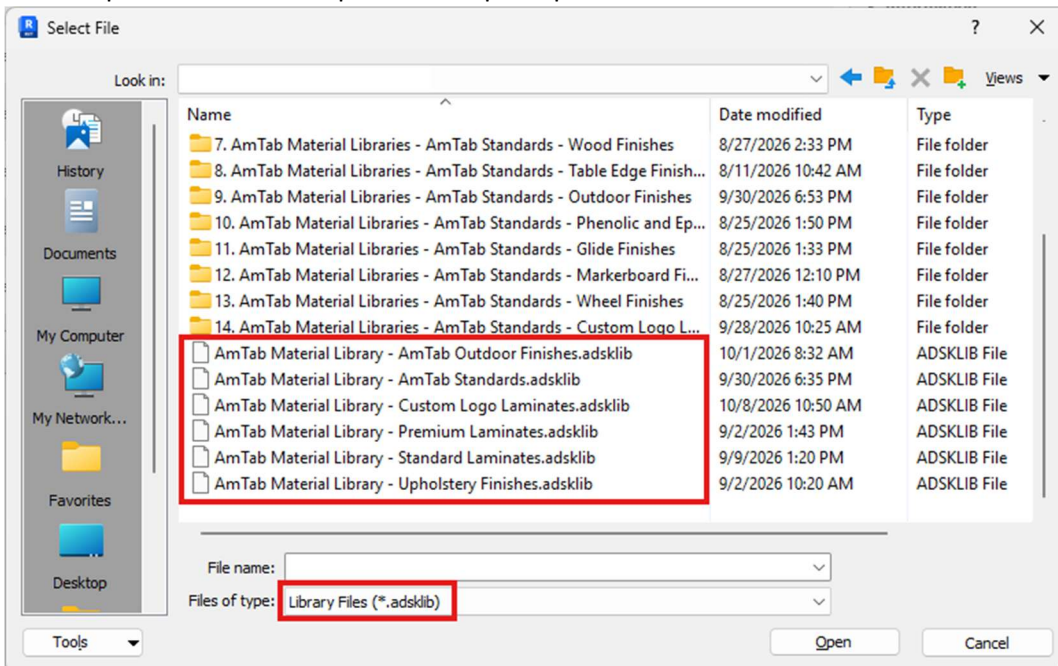

3. Select the downward-facing arrows to expand the library panel. Choose a loaded library from the left side to view its materials. Materials are listed alphabetically. To add a material to your project, select the upward-facing arrow beside it.

